

## Alternative connection RPM sense connection

If you have trouble with measurement RPM in your engine you can try alternative connection to shutdown wire of ignition coil.



Please connect the PRM measuring circuit like below:

